


How to make a ROMAN BLIND

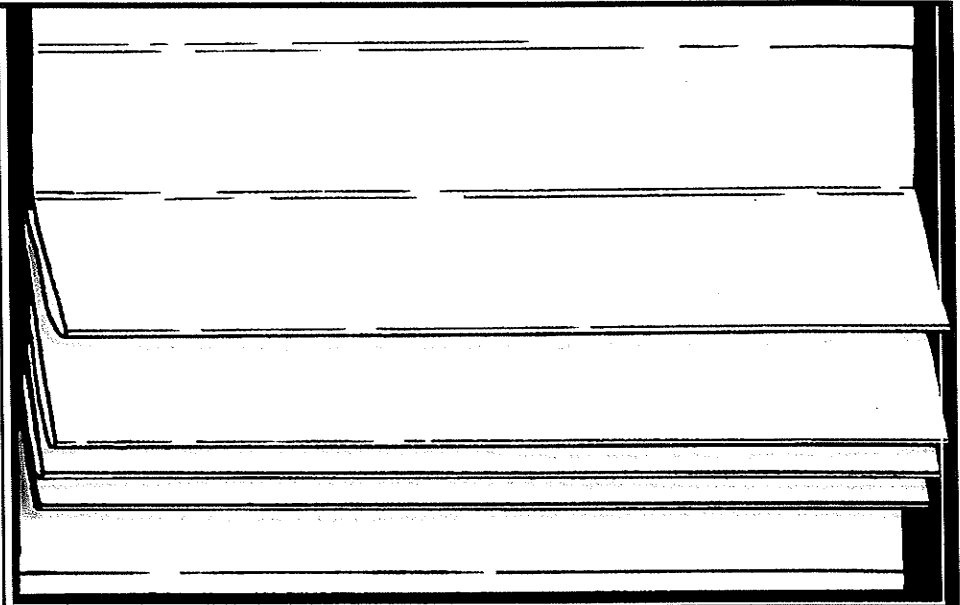

Using our Roman blind tape (RPT17), 6mm timber dowel, B32 roman clip and rings

As this method uses timber dowel, you will achieve a more structured look.

Lincraft
Create a beautiful life.


STEP 1

Hem the base, sides, and top of the blind to desired width and length. Attach ungathered heading or touch tape to the top of the blind to form heading.

STEP 2


Stitch first row of RPT17 tape approx. 15cm from base of blind, starting and finishing tape inside the side hems. Continue adding rows of tape at approx. 25 - 30cm intervals up the blind.

For best results sew tape with pocket down towards base of blind, when blind is threaded tape folds up on itself, giving a neater finish on the wrong side.

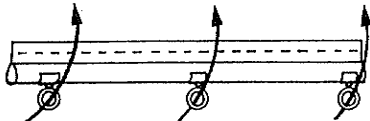

STEP 3

Thread 6mm timber dowel, cut to the same length as the tape, through the pocket in RPT tape.

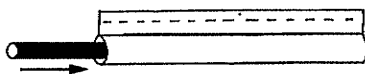

STEP 4

Snap B32 ring clips onto the dowel (over fabric). One at each end, with the remaining evenly spaced with a maximum of approx. 65cm between clips.

STEP 5


Thread cord through rings, tying the cord to the first ring at the base of the blind.

STEP 6

Attach to Soft Shade Track or similar.

STEP 7

After setting curtain to closed position, knot cords together then plait remaining cords. Use barrel or trumpet to give finishing touch.

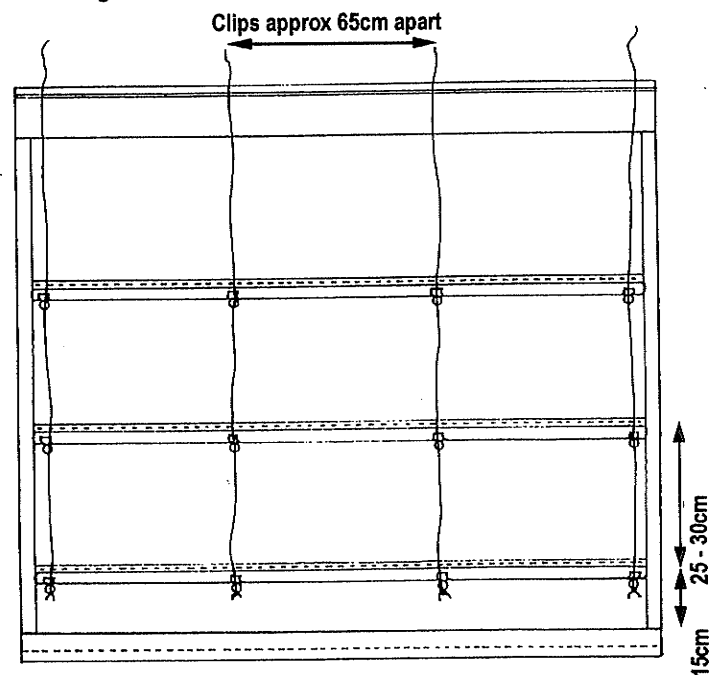

Start tape 2cm in from sides at edge of side seam

STEP 8

Attach cleat to architrave.

Now...look for selected items in store.